


Adjusting The Mounting Head

Note: A 16" rim must be used when setting this head.

Adjust the working tool to be parallel with the edge of the rim.

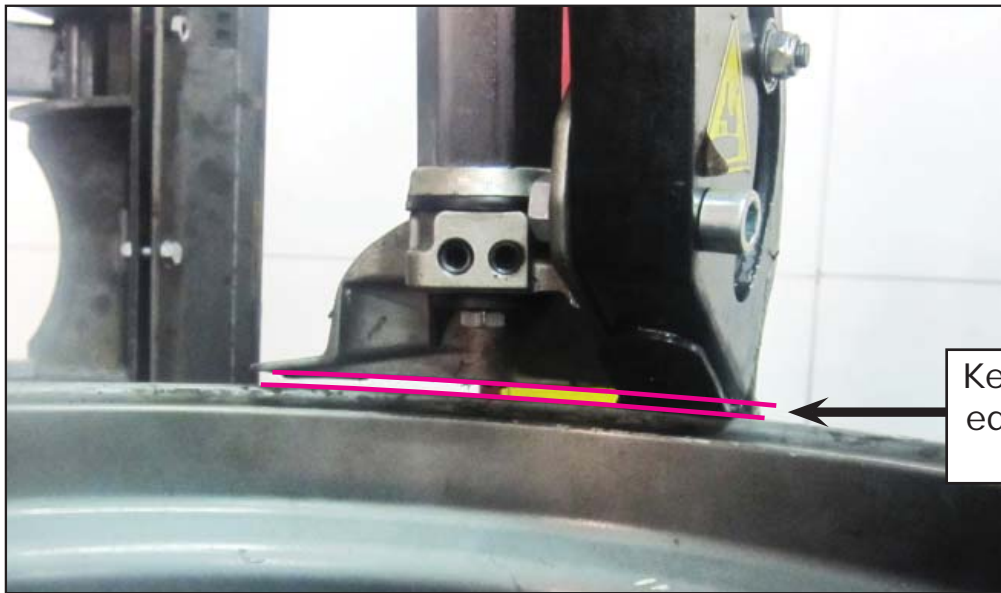


Keep these parts equidistant from each other

Adjust this screw to lift up or down the working tool to the correct distance between the tool bottom and the rim. Usually 3mm is acceptable.



There are 5 screws to fix this mounting head (Labeled 1-5)

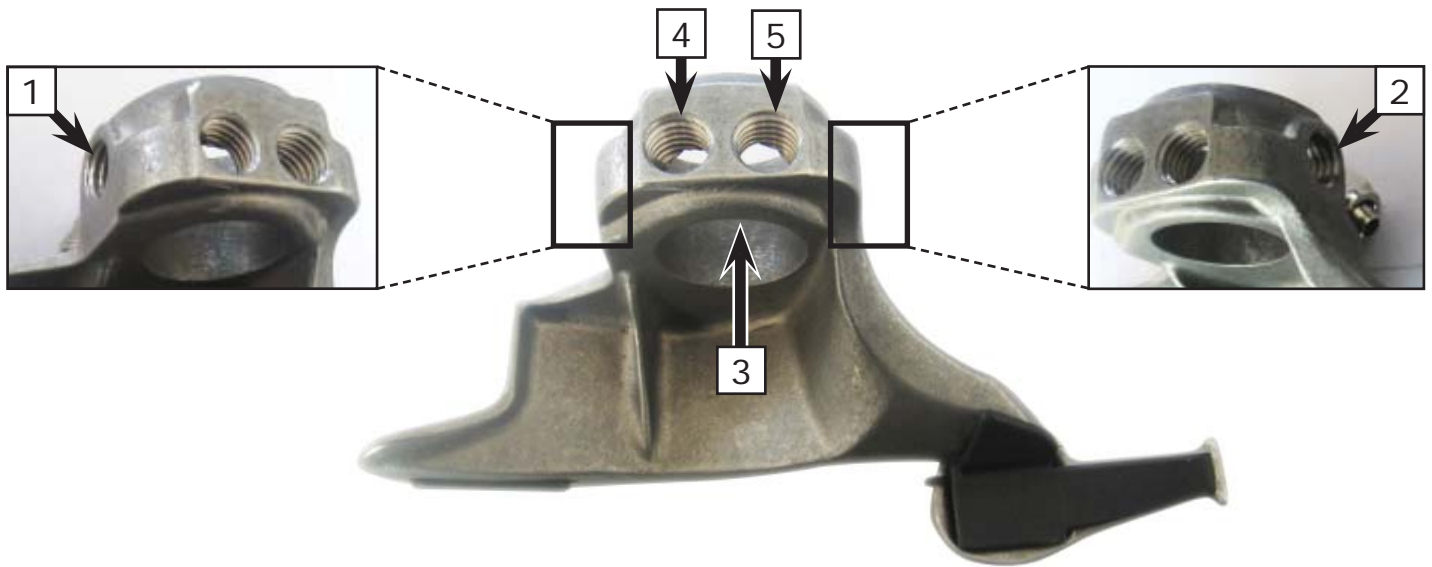

1. Loosen all 5 screws a little.
2. Tighten the No.1 screw to make the left side of the working tool point down.
3. If necessary, tighten the No.4 and No.5 screws to adjust the head forward and backward.
4. When the height is correct, tighten the No.2 screw.
5. Finally secure the No.3 screw into the hexagonal arm.